

INSTALLATION INSTRUCTIONS

Uncased Evaporator Coils, Vertical

EAA4X18-61

NOTE: Read the entire instruction manual before starting the installation.

TABLE OF CONTENTS


	PAGE
SAFETY CONSIDERATIONS	1
INTRODUCTION	1
INSTALLATION	1
Inspect Equipment	1
Select Installation	1
Installation	2
Connect Refrigerant Piping	3
Connect Lines	3
Refrigerant Metering Device	4
Condensate Drain Line Connection	4
Waste Line Connection	4
CARE AND MAINTENANCE	5

SAFETY CONSIDERATIONS

Improper installation, adjustment, alteration, service, maintenance, or use can cause explosion, fire, electrical shock or other conditions which may cause death, personal injury or property damage. Consult a qualified installer, service agency, or your distributor or branch for information or assistance. The qualified installer or agency must use factory-authorized kits or accessories when modifying this product. Refer to the individual instructions packaged with the kits or accessories when installing.

Follow all safety codes. Wear safety glasses, protective clothing and work gloves. Use quenching cloths for brazing operations. Have fire extinguisher available. Read these instructions thoroughly and follow all warnings or cautions attached to the unit. Consult local building codes and the current editions of the National Electrical Codes (NEC) NFPA 70.

In Canada, refer to the current editions of the Canadian Electrical Code CSA C22.1.

Recognize safety information. This is the safety-alert symbol . When you see this symbol on the unit and in instructions or manuals, be alert to the potential for personal injury.

Understand the signal words **DANGER**, **WARNING** and **CAUTION**. These words are used with the safety-alert symbol. **DANGER** identifies the most serious hazards which **will** result in severe personal injury or death. **WARNING** signifies hazards which **could** result in personal injury or death. **CAUTION** is used to identify unsafe practices, which **may** result in minor personal injury or product and property damage. **NOTE** is used to highlight suggestions which **will** result in enhanced installation, reliability, or operation.

IMPORTANT: Nitrogen can leak out through the needle pierce hole in the plugs. This does not indicate a leaking coil nor warrant return of the coil.

WARNING

ELECTRICAL SHOCK HAZARD

Failure to follow this warning could result in personal injury or death.

Before installing, modifying or servicing system, always turn off main power to system. There may be more than one disconnect switch. Lock out and tag switch with a suitable warning label.

CAUTION

PERSONAL INJURY HAZARD

Failure to follow this caution may result in personal injury.

This coil contains Nitrogen precharge of 15 PSIG. Release of this pressure through the center of the rubber plugs is required before removing the plugs.

CAUTION

CUT HAZARD

Failure to follow this caution may result in personal injury.

Sheet metal parts may have sharp edges or burrs. Use care and wear appropriate protective clothing and gloves when handling parts.

CAUTION

ENVIRONMENTAL HAZARD

Failure to follow this caution may result in environmental damage.

Federal regulations require that you do not vent refrigerant to the atmosphere. Recover during system repair or final unit disposal.

INTRODUCTION

Use this instruction manual to install EAA4X indoor coils on upflow or downflow furnaces. **Do not install coil in horizontal position.** EAA4X are uncased (bare) coils that require a field-fabricated or accessory enclosure.

INSTALLATION

INSPECT EQUIPMENT

File claim with shipper if equipment is damaged or incomplete.

SELECT INSTALLATION

See **Table 1** for dimensions and accessory part numbers.

INSTALLATION OF EVAPORATOR COIL

⚠ CAUTION

UNIT OR PROPERTY DAMAGE HAZARD

Failure to follow this caution may result in product or property damage.

Take precautions to ensure that aluminum tubes do not come in direct contact or allow for condensate runoff with dissimilar metal. Dissimilar metals can cause galvanic corrosion and possible premature failure.

NOTE: Consult the furnace installation instructions for any special requirements when installing the coil to the furnace.

Table 1 – EAA4X Uncased Coil Information

MODEL NUMBER	TONNAGE	MATCHED FURNACE WIDTH (IN.)	UNCASED COIL DIMENSIONS	
			Width	Depth
EAA4X24L14A	2	14–3/16	13–1/8	19–7/8
EAA4X24L17A1	2	17–1/2	16–7/16	19–7/8
EAA4X30L14A1	2–1/2	14–3/16	13–1/8	19–7/8
EAA4X30L17A1	2–1/2	17–1/2	16–7/16	19–7/8
EAA4X36L17A1	3	17–1/2	16–7/16	19–7/8
EAA4X36L21A1	3	21	19–15/16	19–7/8
EAA4X37L17A1	3	17–1/2	16–7/16	19–7/8
EAA4X42L21A1	3–1/2	21	19–15/16	19–7/8
EAA4X48L21A1	4	21	19–15/16	19–7/8
EAA4X48L24A1	4	24–1/2	23–7/16	19–7/8
EAA4X60L24A1	5	24–1/2	23–7/16	19–7/8
EAA4X61L21A1	5	21	19–15/16	19–7/8

For downflow EAA4X coil installations in pre-installed empty coil casing:

- Remove and discard fitting panel shipped with the uncased coil. See **Fig. 1**.
- Remove access panels of pre-installed empty coil casing and slide the uncased coil into place.
- Install the fitting panel on the refrigerant tubes and condensate drain.
- Re-attach the access panel.

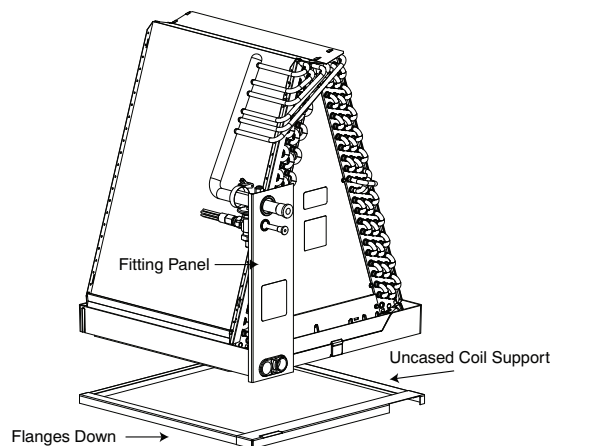


Fig. 1 – Uncased Coil Support

For upflow EAA4X coil installations in pre-installed empty coil casing:

- Remove and discard fitting panel shipped with the uncased coil. See **Fig. 1**.

- Remove access panels of pre-installed empty coil casing and slide the uncased coil into place.
- Install the fitting panel on the refrigerant tubes and condensate drain.
- Re-attach the access panel.

For upflow EAA4X coil plenum installation:

- Mount factory coil support (shipped with coil) directly on furnace flanges to support the coil. See **Fig. 1**.

IMPORTANT: Uncased coil width and depth dimensions are larger than furnace flange dimensions. See **Table 1** for uncased coil dimensions. Fabricate supply plenum according.

- Slide coil into plenum opening.
- Cover plenum opening with field supplied front panel.
- When installing uncased coil into pre-installed accessory coil casing, use **Table 1** to verify correct match.

NOTE: On upflow installations where the indoor coil is placed in an unconditioned space, a 6-in wide piece of insulation should be applied and wrapped around the outside of coil casing and supply duct contact point.

For downflow EAA4X coil installation in existing or field fabricated coil casing where furnace is narrower than the casing or rotated 90 degrees to casing:

- Set uncased coil in supply duct opening.
- Place field fabricated 3 in. adapter on coil casing. Adapter should be tapered to fit coil/furnace combination when one of them is larger than the other.
- Set furnace on adapter.

IMPORTANT: Installing “A” coils rotated 90 degrees from the front of the furnace in downflow applications can cause water blow off or coil freeze up. This is due to the concentration of air on one coil slab or lack of air on the opposite coil slab. If the airflow is high due to ductwork or other causes, and there is a chance for water blow off, it is recommended that a 3-in. field-supplied adapter be placed between the coil and the furnace to allow the air to distribute evenly to both coil slabs. (See Fig. 2.)

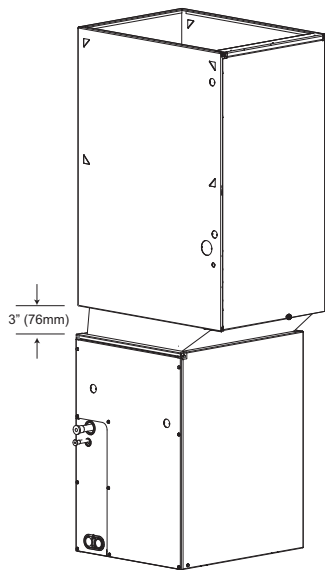


Fig. 2 – Downflow Installation with Coil Rotated 90°

A13062

REFRIGERANT LINE CONNECTIONS

⚠ WARNING

PERSONAL INJURY HAZARD

Failure to follow this warning could result in personal injury.

Wear eye protection.

Coil is factory charged with 15 psi nitrogen. The coil is under pressure and TXV screen is in place behind liquid line plug. DO NOT remove liquid line plug first, always remove the suction line plug first to depressurize the coil.

NOTE: Factory nitrogen charge may escape past rubber plugs during storage. This does not indicate a leaking coil nor warrant return of the coil.

Size and install refrigerant lines according to information provided with outdoor unit. Coil connection tube sizes are shown in **Table 1**. Route refrigerant lines to the coil in a manner that will not obstruct service access to the unit or removal of the filter.

Do not use damaged, dirty, or contaminated tubing because it may plug refrigerant flow-control device. ALWAYS evacuate the coil and field-supplied tubing before opening outdoor unit service valves.

CONNECT REFRIGERANT, LIQUID, AND SUCTION LINES

For matched and mismatched systems, use line sizes recommended in outdoor unit Installation Instructions.

⚠ CAUTION

UNIT OR PROPERTY DAMAGE HAZARD

Failure to follow this caution may result in property damage.

Take precautions to ensure Aluminum tubes do not come in direct contact or allow for condensate run off with a dissimilar metal. Dissimilar metals can cause galvanic corrosion and possible premature failure.

The coil can be connected to outdoor units using field-supplied tubing of refrigerant grade. Always evacuate tubing and reclaim refrigerant when making connections or flaring tubing. Leak check connections before insulating entire suction line.

See **Table 1** for coil connection tube size.

1. Remove cabinet door.
2. Remove rubber plugs, suction plug then liquid plug, from coil stubs using a pulling and twisting motion. Hold coil stubs steady to avoid bending or distorting.
3. Remove tubing plate with rubber grommets and slide plate with grommets onto the refrigerant lines (field line-set), away from braze joints.
4. Fit refrigerant lines into coil stubs. Wrap a heat sinking material such as a wet cloth behind braze joints.
5. Wrap TXV and nearby tubing with a heat-sinking material such as a wet cloth.
6. Use 1/2 psig Nitrogen purge in the suction and out the liquid line.
7. Braze using a Sil-Fos or Phos-copper alloy. Do not use soft solder.
8. After brazing, allow joints to cool. Carefully remove TXV bulb insulation and verify that the TXV bulb is securely fastened with hose clamp. Tighten screw a half-turn past hand tight with TXV bulb placed in the indentation with full contact with the vapor line tube. Re-wrap TXV bulb with insulation.
9. Leak check connections before insulating entire suction line.
10. Slide tubing plate with rubber grommets over joints. Position tubing at center of each grommet to ensure an air seal around the tube. Reinstall cabinet door.

⚠ CAUTION

UNIT DAMAGE HAZARD

Failure to follow this caution may result in product damage.

To avoid valve damage to the refrigerant control device while brazing, valves must be wrapped with a heat-sinking material such as a wet cloth.

⚠ CAUTION

UNIT DAMAGE HAZARD

Failure to follow this caution may result in product damage.

DO NOT BURY MORE THAN 36-in (914 mm) OF REFRIGERANT TUBING IN GROUND. If any section of tubing is buried, there must be a 6-in (152 mm) vertical rise to the valve connections on the outdoor unit. If more than the recommended length is buried, refrigerant may migrate to cooler buried section during extended periods of unit shutdown, causing refrigerant slugging and possible compressor damage at start-up.

REFRIGERANT METERING DEVICE

EAA4X Models have a factory installed hard shut-off TXV designed only for use with R-410A refrigerant. Use only with outdoor units designed for R-410A.

NOTE: ALL TXVS HAVE PRESET SUPERHEAT SETTINGS AND ARE FIELD NON-ADJUSTABLE.

CONDENSATE DRAIN LINE CONNECTION

⚠ CAUTION


PROPERTY DAMAGE HAZARD

Failure to follow this caution may result in property damage.

When installing over a finished ceiling and/or living area, install a field-fabricated secondary condensate pan under the entire unit.

The coil is designed to dispose of accumulated water through built-in condensate drain fittings. It is recommended that PVC fittings be used on the condensate pan. Do not over-tighten. Finger tighten plus 1-1/2 turns. Be sure to install plastic plug in unused condensate drain fitting. Two 3/4-in female threaded pipe connections are provided in each coil condensate pan.

A trap is not necessary on the condensate line. Consult local codes for additional restrictions or precautions. If local codes require a trap then the following guidelines are suggested to assure proper drainage. Install a trap in condensate line of coil as close to the coil as possible. Make trap at least 3-in (76 mm) deep and no higher than the bottom of unit condensate drain opening (See Fig. 3). Pitch condensate line 1-in. (25.4 mm) for every 10 ft. of length to an open drain or sump. Make sure that the outlet of each trap is below its connection to condensate pan to prevent condensate from overflowing the drain pan. Prime all traps, test for leaks, and insulate traps and lines if located above a living area.

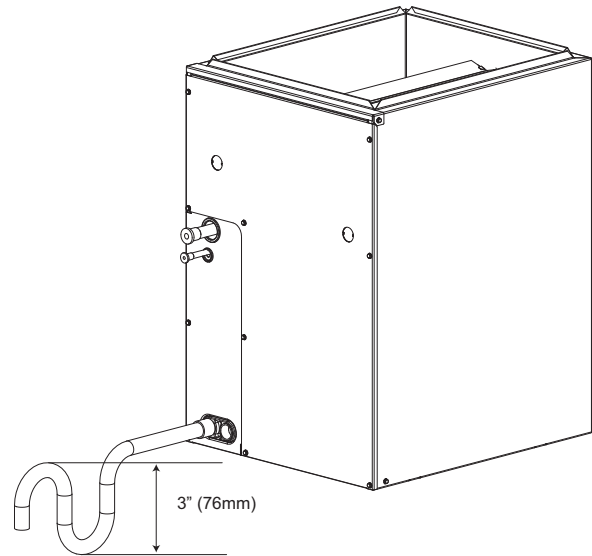

A13067

Fig. 3 – Condensate Trap


NOTE: If unit is located in or above a living space, where damage may result from condensate overflow, a field-supplied, external condensate pan should be installed underneath the entire unit, and a secondary condensate line (with appropriate trap) should be run from the unit into the pan. Any condensate in this external condensate pan should be drained to a noticeable place. As an alternative to using an external condensate pan, some localities may allow the running of a separate 3/4-in (19 mm) condensate line (with appropriate trap) per local code to a place where the condensate will be noticeable. The owner of the structure must be informed that when condensate flows from secondary drain or external condensate pan, the unit requires servicing or water damage will occur. To further protect against water damage, install a float switch to shut the unit off if the water in the secondary pan gets too high.

NOTE: To avoid drainage problems, test the primary drain line by slowly pouring water into the pan. Check piping for leaks and proper condensate drainage. Using the secondary drain as explained in the previous note provides further protection against overflow due to a clogged primary drain.

NOTE: In applications where return air humidity levels stay at 70% or above for a prolonged period of time, condensation can form on the bottom of pan and drip.

WASTE LINE CONNECTION

If the condensate line is to be connected to a waste (sewer) line, an open trap must be installed ahead of the waste line to prevent escape of sewer gases (See Fig. 4).

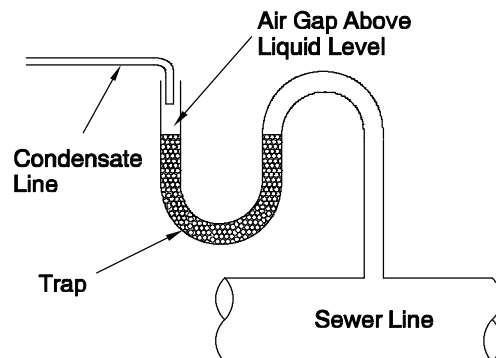

A10216

Fig. 4 – Condensate Drain to Waste Line

⚠ WARNING

EXPLOSION HAZARD

Failure to follow this warning could result in personal injury or death.

Provide trap with air gap in drain line when connecting to waste (sewer) line.

NOTE: The State of California requires Proposition 65 labels (Prop 65) for products containing materials of concern. Taped to the header plate is the Proposition 65 Label for this product. Apply this label on the outside front of the furnace coil casing.

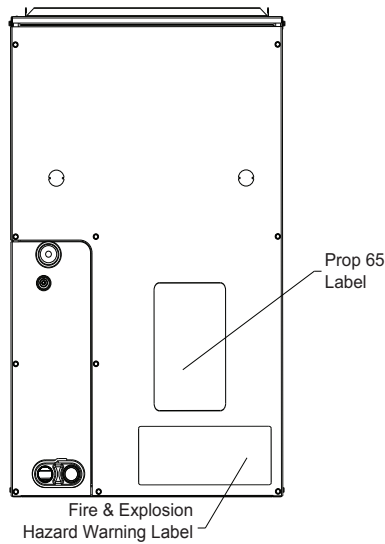


Fig. 5 – Label Placement on Casing

A180077

NOTE: Attached to the literature assembly is the Fire and Explosion Hazard warning label for this product. Apply this label on the outside front of the furnace coil casing if one does not exist on the casing. (See Fig. 5)

CARE AND MAINTENANCE

To continue high performance and minimize possible equipment failure, it is essential that periodic maintenance be performed on this equipment. Consult your local dealer as to the proper frequency of maintenance, but it should be done at least annually.

The ability to properly perform maintenance on this equipment requires certain mechanical skills and tools. If you do not possess these, contact your dealer for maintenance. The only consumer service recommended or required is filter replacement or cleaning on a monthly basis.

⚠ CAUTION

ENVIRONMENTAL HAZARD

Failure to follow this caution may result in environmental damage.

Remove and recycle all components or materials (i.e., oil, refrigerant, etc.) before unit final disposal.

